



Be Free and go where you want

## How to Re-Set DigiBox

"DigiBoxes" are very sensitive particularly during dish alignment and can "Lockup" several times within a short period.

To reset a "DigiBox" unplug the mains lead and reconnect after one minute. After a further 30 seconds, the "DigiBox" should operate normally.

Please note that to reset the "DigiBox", power **must** be completely removed from it.

If using one of the Pace Mini "DigiBoxes" then be careful when removing the DC power plug from the rear of the unit, it is very easy to short the power to the metal rear panel of the unit. We advise removing the mains power supply from the A.C. socket, or in cases where the unit is supplied directly from 12 Volts, then turn off the 12 Volt supply by some means.

\* **Please note:** If you've reset a "DigiBox" once, don't assume you won't have to do it again in the course of satellite finding.

Visit us at [www.LCSLeisure.co.uk](http://www.LCSLeisure.co.uk) or mail us at [info@LCSLeisure.co.uk](mailto:info@LCSLeisure.co.uk)

TEL: 0845 555 4400

LCS Leisure Ltd, Canal House, 24 The Wharf, Preston Brook, Cheshire. WA7 3AH